


BLAZER BADGE IRON-ON INSTRUCTIONS


To apply a house colour iron-on blazer badge, you need to use a warm, dry iron and apply firm pressure through a protective cloth.

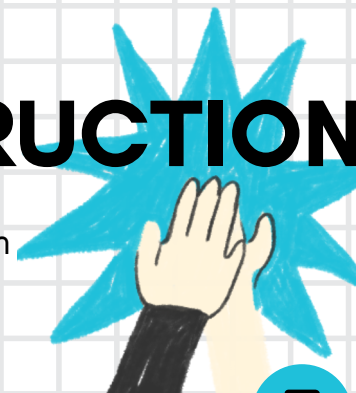

1 Check the Fabric:

Test the iron on a hidden area first to ensure the heat won't damage the blazer.

Practice

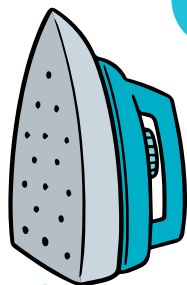

2 Position the Badge:

Lay the blazer flat on an ironing board. Place the badge above the pocket and school logo.



3 Clean the Area:

Use a lint roller to remove any dust or fuzz from the spot where the badge will go to ensure a strong bond.



4 Heat the Iron:

Set your iron to a low-medium heat (typically the 'wool' setting) and ensure the **steam function is OFF**, as moisture can weaken the adhesive.



5 Cover and Protect:

Place a thin cotton cloth, like a handkerchief or pillowcase, over the badge to protect the embroidery and the blazer fabric from direct heat.



6 Apply Pressure:

Press the iron down firmly on the cloth for **2-3 minutes**. Do not slide the iron back and forth; apply even, stationary pressure. Keep checking.



7 Gently move the iron back and forth:

Now move the iron in small motions, forwards and backwards over the label for another **3 - 4 minutes**. It may take longer, so keep checking.



**TRY REMOVING
PILLOW IF NEEDED**

8 Cool and Set:

Let the badge cool completely for at least 5 minutes before moving the blazer. The adhesive needs this time to crystallise and fully bond.



- Apply label carefully – take your time.
- You can sew it on instead if preferred.
- Follow the step-by-step guide.
- Watch the online video for guidance.
- We are not liable for any damage.

For a video tutorial on how to iron on your School House badge please visit our website: Uniform